




Sony Walkman WM-4 Teardown

In this guide, you will learn how to open a Sony walkman WM-4 (a second generation cassette player).

Written By: lenzo

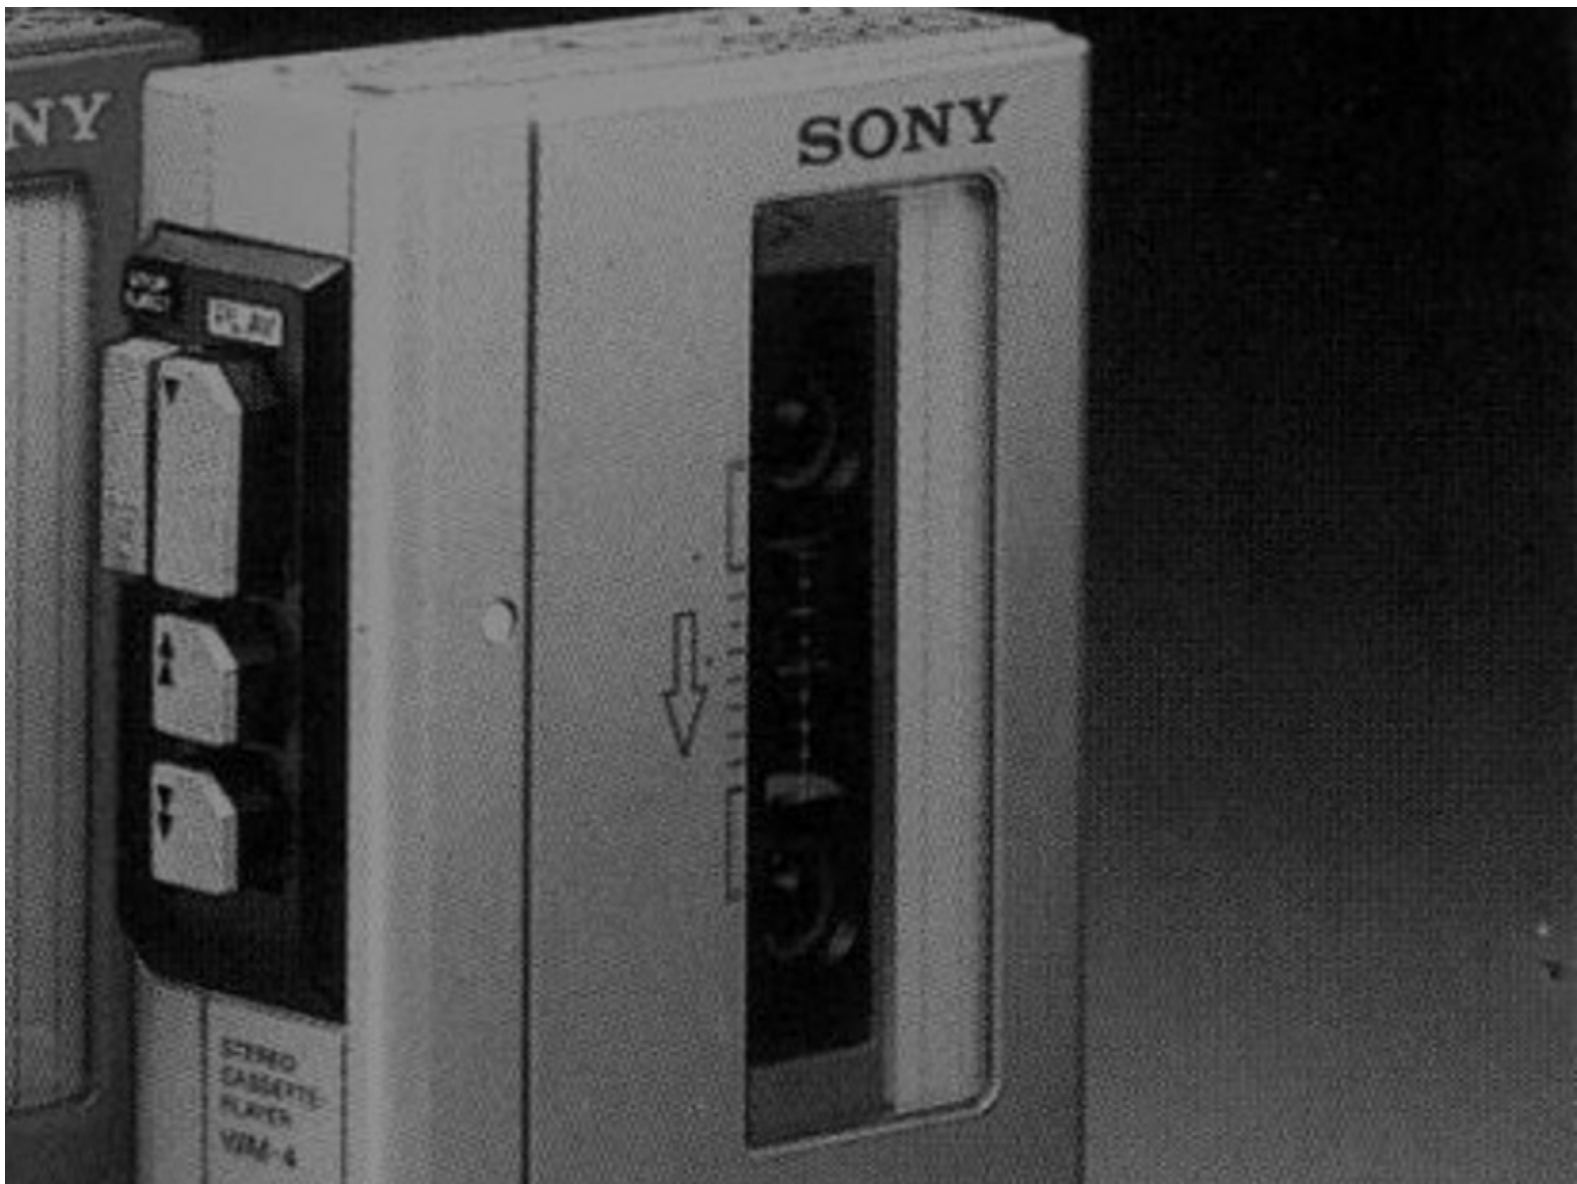

INTRODUCTION


Before the introduction of MP3 players, people bought their own music. Sony Walkman WM-4 is a second generation cassette player, which was highly popular during this time. This guide tells you how to open a Sony Walkman WM-4.



TOOLS:

- [iFixit Opening Tools](#) (1)
 - [Spudger](#) (1)
 - [64 Bit Driver Kit](#) (1)
-

Step 1 — Sony Walkman WM-4 Teardown

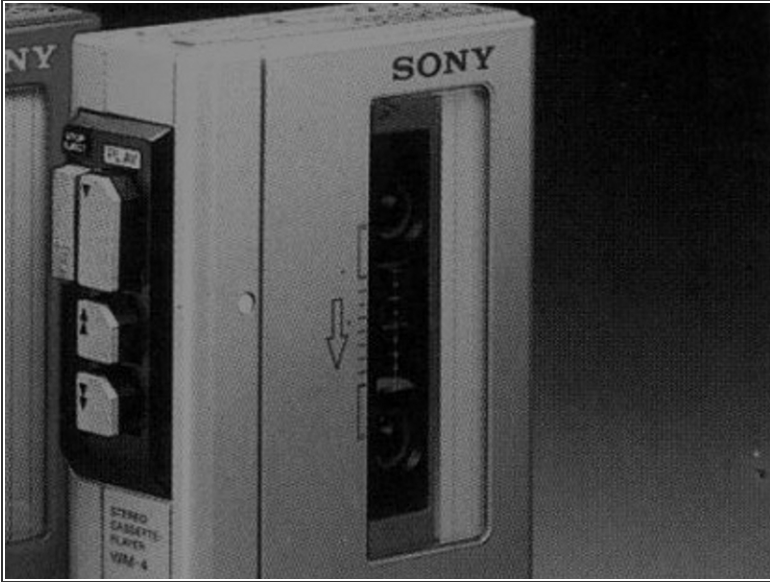

- Flip the Sony Walkman so that its rear side faces you.
- Use a screwdriver to remove the two screws from the surface of the Walkman.
- ⓘ Both the screws are highlighted in red in the image.
- Press the battery plate slightly with your thumb and slide it downwards. This will open the battery compartment.
- ⓘ The battery compartment is highlighted in blue in the image.
- Remove the batteries from the Walkman.

Step 2



- Turn over your Walkman and gently press the cover to open the cassette holder.
- When the cassette holder is opened, you can see two more screws.
- ⓘ The two screws are highlighted in red in the image.
- Using a screwdriver, remove the two screws.

Step 3



- Use a plastic opening tool or a spudger to push the tabs. This will remove the cover and open the Walkman.
- ⓘ The tabs are highlighted in blue in the image.
- Once the Walkman is opened, you can troubleshoot for any issues, remove the old wires and attach new ones, or even reassemble the Walkman.

This document was last generated on 2017-06-21 08:33:13 PM.